



QuickStart

Power On Device

Model VC-22D

Electronic Valve Controller


1 Loosen 6 screws




2 Swing blue faceplate open



3 Run power cable through gland.

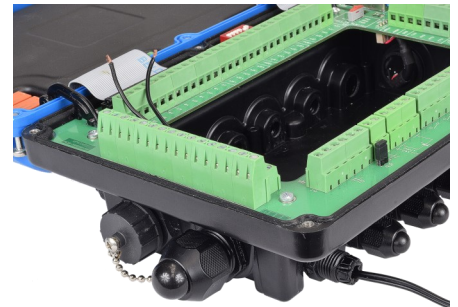


4 Attach power cables to V+/V- terminals. For input/output wiring, see full manual.

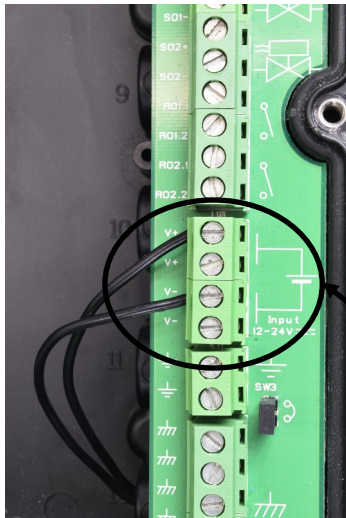

CAUTION
POWER SUPPLY GREATER THAN 32 VDC WILL
DAMAGE DEVICE AND VOID WARRANTY.
USE POWER SUPPLY BETWEEN 12-24 VDC ONLY.

12-24 VDC (V+)

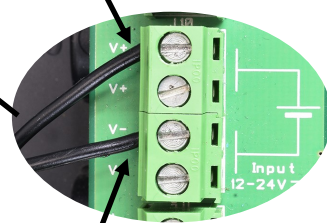

0 VDC (V-)

5 Swing blue faceplate closed



6 Tighten 6 screws



For full manual, go to:

www.cla-val.com/electronic-products

Click on the following links:

1. Valve Controllers
2. VC-22D
3. Technical Manual
4. VC-22D IOM Manual



QuickStart

Model VC-22D


Load Standard ValvApp

Electronic Valve Controller

1 Press left navigation arrow to load standard ValvApp.




2 Highlight North America and press OK button.

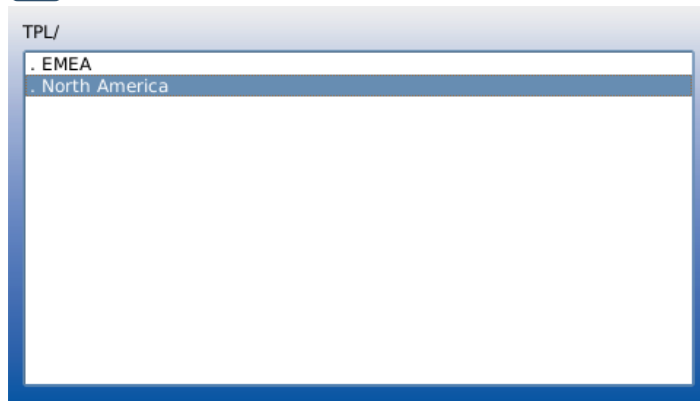

3 Highlight desired ValvApp and press OK button.



4 Say yes to load library, and OK to restart unit.

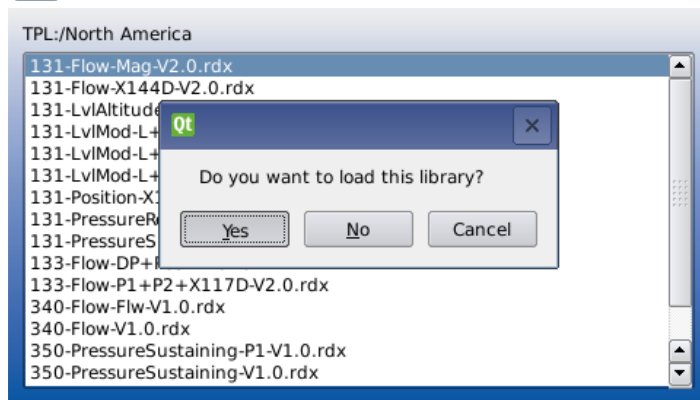

5 If using standard ValvApp, say yes to wizard.
If using custom ValvApp from USB, say no.



Accessing Config Menus

- Long left See input values
- Long Right See outputs values
- Long Up Set control parameters
- Short Down Set interactive variables

"Short" = push and release quickly, "Long" = push and hold for 2 seconds